



Rescue Tools Daily Care & Preventive Maintenance



How to keep your LUKAS Tools in perfect condition

LUKAS
Because you never get a second chance

Contents

Contents	2
Introduction.....	3
Maintenance for Hydraulic Pumps	4
Introduction.....	4
Visual & User check after each use	6
Pump unit	6
Petrol Engine	6
Electric Motor	6
Handpump	6
Hydraulic hoses	6
Function and Load Test	7
Maintenance for spreaders	8
Introduction.....	8
Visual & User check after each use	9
Spreader arms and tips.....	9
Spreader Body	9
Hydraulic hoses	9
Function and Load Test	9
Maintenance for cutters.....	10
Introduction.....	10
Visual & User check after each use	11
Cutter blades	11
Cutter Body.....	11
Tensioning the Centre Bolt	11
Method for Checking Centre Bolt Tension	12
Hydraulic hoses	12
Function and Load Test	12
Maintenance for combination tools.....	13
Introduction.....	13
Table 1: Tightening torques for central bolts on cutters and combination tools	14
Maintenance for rescue rams.....	15
Introduction.....	15
Visual & User check after each use	16
Claws on cylinder bottom and piston	16
Rescue ram body	16
Hydraulic hoses	16
Function and Load Test	16
Maintenance for Hoses & Hose Reels	17
Introduction.....	17
Visual & User check after each use	17
Examples of possible defects of hose	17
Safety Instruction	18
Taking Care of Hoses	19
Streamline couplings.....	18
Adjustable Ram support.....	18
Frequently Asked Questions.....	21

Introduction

This booklet is written as a guideline on daily care and preventive maintenance for LUKAS Rescue Tools. The intention of all inspections is:

- to eliminate minor problems by a visual check after each use,
- to detect eventual faults in a preventive manner before they can cause a failure of the whole tool in a rescue situation,
- To save money on spare parts, because faults identified at an early stage can be fixed easier and cheaper than those identified later, where the damage is normally more serious.

This booklet is not meant as a workshop or repair manual, because repairs to the hydraulic parts require experience and special workshop equipment.






However, regular visual inspections can be carried out easily by each user.








Maintenance for Hydraulic Pumps

Introduction

The daily care and maintenance of pumps is the same irrespective of the model. A selection of the current range of pumps available is pictured below:

Model	
P620OG Compact <ul style="list-style-type: none"> • Super compact pump – only 15 kg • High mobility through compact design • Designed for long run times • Operated by high-quality HONDA engine • Low noise level 	
GS-2 L & P620SG Compact Simo <ul style="list-style-type: none"> • Weight only 24.8 kg for simultaneous operation of all LUKAS Rescue Tools • High mobility through compact design • Designed for long run times • Operated by high-quality HONDA engine • Low noise level 	
P620SD Diesel Simo <ul style="list-style-type: none"> • 4 stroke diesel engine • Weight 54 kg • simultaneous operation of all LUKAS Rescue Tools 	
P620SE Electric Simo <ul style="list-style-type: none"> • Electric motor • Weight 32 kg • simultaneous operation of all LUKAS Rescue Tools 	
P630SG Compact Simo <ul style="list-style-type: none"> • Weight only 23.9 kg for simultaneous operation of all LUKAS Rescue Tools • High mobility through compact design • Designed for long run times • Operated by high-quality HONDA engine • Low noise level • Turbo function (double oil flow) 	

<p>GS6R & P640SG Simo</p> <ul style="list-style-type: none"> • 4 stroke petrol engine • Weight 38 kg • Optional for 2 tools alternate or simultaneous operation • Two-stage pumps with high oil flow • Oil reservoir capacity of up to 7.5 litres 	
<p>PS6R & P640SE Simo</p> <ul style="list-style-type: none"> • 230V 1.5kW Motor • Weight 43 kg • Optional for 2 tools alternate or simultaneous operation • Two-stage pumps with high oil flow • Oil reservoir capacity of up to 7.5 litres 	
<p>GT6R & P640TG Trimo</p> <ul style="list-style-type: none"> • Simultaneous operation of up-to 3 tools • Large Hydraulic oil capacity: Able to drive all LUKAS rescue tools in any possible 3-tool configuration • Also available in Electric driven version PT6R/P640TE (230V, 2.2kW) 	
<p>P650 Series</p> <ul style="list-style-type: none"> • Simultaneous operation of up to 4 tools • Large Hydraulic oil capacity: Able to drive all LUKAS rescue tools in any possible configuration • Electric start (Pull cord back up) • Turbo function (double oil flow) 	
<p>P157AUSRESCUE & P157RESCUE</p> <ul style="list-style-type: none"> • 2 speed Double Acting handpump • P157AUSRESCUE coupling ONLY • P157RESCUE with 5M twin hose & coupling • Oil capacity 2.4 litres 	

Visual & User check after each use

A visual & user check should be carried out after each use of the pump. The pump, engine and the hydraulic hoses should be checked for the following:

Pump unit

- correct hydraulic oil level
- oil leakage on the seal of oil container and valve block
- condition of carrying frame

Petrol Engine

- any visible external damage
- condition of the rope starter
- electric start battery charged (P650 series)
- correct motor oil level
- any Oil or Petrol leaks

Diesel Engine

- any visible external damage
- condition of the rope starter
- correct motor oil level
- any Oil or Diesel leaks

Electric Motor


- any visible external damage
- condition of electric cable and plug, including cable entry into the motor and cable strain relief
- proper function of the on/off-switch

Handpump

- correct hydraulic oil level
- oil leakage from filler plug and valve block
- any visible external damage
- pump handle firmly fixed to piston assembly

Hydraulic hoses

- condition of the end fittings
- leakage on the connection to the valve block
- visible surface defects such as cracks, kinks, abrasions or bubbles
- condition and smooth operation of quick couplers
- presence and condition of dust caps
- Hoses not older than 10 years? The date of manufacture (quarter / year) is printed on the hose surface.

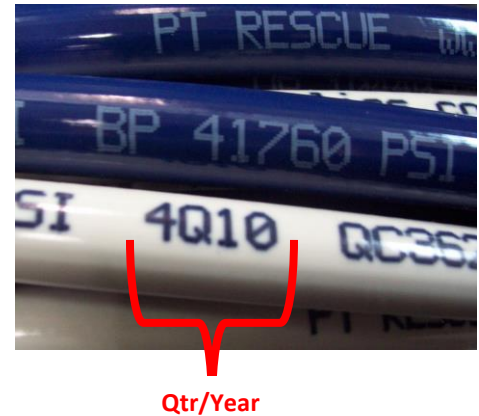

The above is relevant to ALL "hydraulic hoses" when determining its age

Function and Load Test

It is recommended that a full function and load test is carried out on an annual basis. This test should be carried out by LUKAS trained persons only. For a full service of Lukas rescue equipment contact PT Hydraulics.

Regular start-up of pumps

It is recommended that pumps are regularly started and run to ensure easy starts and preventing fuel going stale.

Pumps with electric start feature





Pumps fitted with the electric start feature must be regularly started and run for a period of time to maintain the charge in the battery. It is important that the 'start' switch is not left on for any period of time without starting the pump and that the button is NOT lit when not in operation.



Maintenance for spreaders

Introduction

The daily care and maintenance of spreaders is the same irrespective of the model. A selection of the current range of spreaders available is pictured below:

Model	
SP300 <ul style="list-style-type: none">• 17 kg operating weight• 605 mm spreading distance• Spreading force 34 – 112 kN	
LSP40EN & SP310 <ul style="list-style-type: none">• 19.6 kg operational weight• 720 mm spreading distance• Spreading force up to 256 kN	
LSP60EN & SP510 <ul style="list-style-type: none">• 24.9 kg operational weight• 800 mm spreading distance• Spreading force up to 230 kN	
LSP80EN & SP512 <ul style="list-style-type: none">• operational weight 25.9 kg• Spreading distance 610 mm• Spreading force at tips (closed arm position) 128 kN• Spreading force up to 540 kN	

Visual & User check after each use

A visual & user check should be carried out after each use of the spreader. The spreader Arms, body and hoses should be checked for the following

Spreader arms and tips

- visible external damage
- condition of bearing bolts and securing rings
- serration of spreader tips clean and sharp
- fixing mechanism of spreader tips in sound condition

Spreader Body

- oil leakage on cylinder body or control valve
- protection cover for lever arms in good condition
- carry and pipe handles in good condition and properly tightened
- control valve returns to centre position smoothly when released (dead man function)

Hydraulic hoses

- condition of the end fittings
- leakage on the connection to the valve block
- visible surface defects such as cracks, kinks, abrasions or bubbles
- condition and smooth operation of quick couplers
- presence and condition of dust caps
- Hoses not older than 10 years? The date of manufacture (quarter / year) is printed on the hose surface.

Protection Cover

- the area behind the protection cover should be checked and cleared of any debris, liquids and solutions.

Stowage

- the tool should be stowed with the spreader tips slightly open (not under pressure)







Function and Load Test

It is recommended that a full function and load test is carried out on an annual basis. This test should be carried out by LUKAS trained persons only. For a full service of Lukas rescue equipment contact PT Hydraulics.

Maintenance for cutters


Introduction

The daily care and maintenance of cutters is the same irrespective of the model. A selection of the current range of cutters available is pictured below:

Model	
S120 <ul style="list-style-type: none">• 4.4 kg operational weight• Blade opening 52 mm• Round bar 22 mm• Max cutting force 183 kN	
LS301EN & S311 <ul style="list-style-type: none">• 13.9 kg operational weight• Blade opening 150 mm• Round bar 33 mm• Max. cutting force 422 Kn	
LS330EN & S330 <ul style="list-style-type: none">• 14.6 kg operational weight• Blade opening 225 mm• Round bar 33 mm diameter• Max. cutting force 510 kN	
LS501EN & S510 <ul style="list-style-type: none">• 19.2 kg operational weight• Blade opening 182 mm• Round bar 40 mm• Max. Cutting Force 750 kN	
LS511EN & S511 <ul style="list-style-type: none">• 18.8 kg operational weight• Blade opening 150 mm• Round bar 43 mm dia.• Cutting Force up-to 1050 kN	
S700 <ul style="list-style-type: none">• High performance cutter• 20.8 kg operating weight• Blade opening 185 mm• Round bar 38 mm	

Visual & User check after each use

A visual & user check should be carried out after each use of the cutter. The cutter blades, body and hoses should be checked for the following

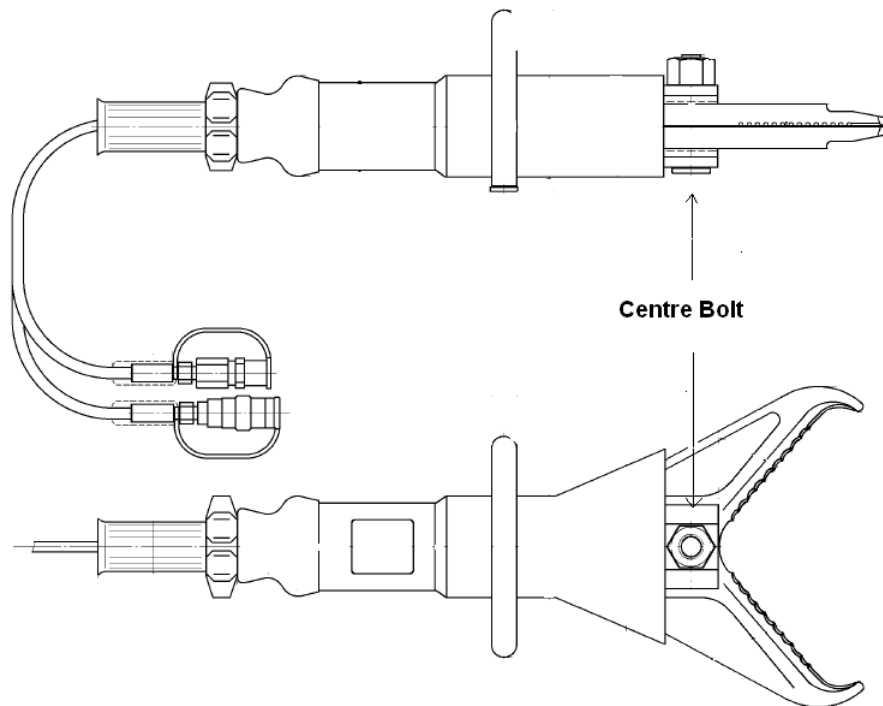

Cutter blades

- condition of bearing bolts and securing rings
- tightening torque of the nut on the central bolt (see table 1 for torque settings)
- visible external damage
- condition of shim plates between cylinder body and cutter blades
- cutting edge clean and sharp with no raised points

Note:

Seriously deformed blades must be changed. It is recommended that both blades are changed. Prior to mounting new blades treat sliding surfaces and all bolts with special mounting grease.

Cutter Body

- oil leakage on cylinder body or control valve
- protection cover for lever arms in good condition
- carry and pipe handles in good condition and properly tightened
- control valve returns to centre position smoothly when released (dead man function)

Protection Cover

- the area behind the protection cover should be checked and cleared of any debris, liquids and solutions.

Stowage

- the tool should be stowed with the cutter tips slightly overlapping

Tensioning the Centre Bolt

The centre bolt should be tensioned on a regular basis to ensure the correct operation of the cutter. The actual frequency of checking the tension is dependent on use. For normal road crash rescue operations and training the torque setting should be checked every 3 months. Where the tool has been subject to heavy operational use they should be checked on completion of the work

Method for Checking Centre Bolt Tension

- Visually inspect nut and bolt for damage.
- Loosen nut by 1/4 of turn. NOTE: S700 cutter requires grub screw in nut to be loosened before adjusting nut tension. Remember to re-tighten grub screw.
- Adjust torque wrench to correct setting and tighten nut.
- Torque settings for all tools are listed in the table 1.

Hydraulic hoses

- condition of the end fittings
- leakage on the connection to the valve block
- visible surface defects such as cracks, kinks, abrasions or bubbles
- condition and smooth operation of quick couplers
- presence and condition of dust caps
- Hoses not older than 10 years? The date of manufacture (quarter / year) is printed on the hose surface.





Function and Load Test

It is recommended that a full function and load test is carried out on an annual basis. This test should be carried out by LUKAS trained persons only. For a full service of Lukas rescue equipment contact PT Hydraulics.

Maintenance for combination tools

Introduction

The daily care and maintenance of Combi-tools is the same irrespective of the model. A selection of the current range of Combi-tools available is pictured below:

Model	
LKS21EN & SC150 <ul style="list-style-type: none">• Cutting Force up to 192 kN• Round Steel up to 22 mm• Spreading Force up to 113 kN• Spreading Distance 265 mm• Weight 10.3 kg	
LKS35EN & SC350 <ul style="list-style-type: none">• Cutting Force up to 380 kN• Round steel up to 30 mm• Spreading force up to 113 kN• Spreading distance 360 mm• Weight 13.9 kg	
SC357 <ul style="list-style-type: none">• Cutting force up to 387 kN• Round steel up to 32 mm• Spreading• Spreading distance 365 mm• Weight 14.8 kg	
LKS55EN, SC550 & SC557 <ul style="list-style-type: none">• Cutting Force up to 535 kN• Round steel up to 37mm• Spreading force 225 kN• Spreading distance 430 mm• Weight 20 kg	

The combination tool is a combination of a spreader and a cutter. Carry out the visual and user checks as described above for the spreader and cutter. The torque settings for the combination tool centre bolt can be found in table 1.

Stowage

- the tool should be stowed with the tips slightly open (not under pressure)

Table 1: Tightening torques for central bolts on cutters and combination tools




Tool Type		Torque Setting
Twin coupling	Streamline	
LS 120-EN	-	MA = 100+10 Nm
-	S120	MA = 80+10Nm
LS 130-EN	-	MA = 100+20 Nm
LS 200-EN	-	MA = 120+10 Nm
LS 300-EN	-	MA = 120+10 Nm
LS301-EN	S311	MA = 120+10 Nm
LS 310-EN	S310	MA = 120+10 Nm
LS 330-EN	S330	MA = 120+10 Nm
LS501-EN	S510	MA = 130+10 Nm
LS530-EN	S530	MA = 130+10 Nm
LS511-EN	S511	MA = 130 +10 Nm
-	S700	MA = 150 + 10 Nm ***
LS 100	-	MA = 100 Nm
LS 120	-	MA = 100+10 Nm
LS 200	-	MA = 100 Nm
LS 300	-	MA = 100 Nm
LS 200 B	-	MA = 120+10 Nm
LS 300 B	-	MA = 120+10 Nm
LS 300 C	-	MA = 120+10 Nm
LKS 10	-	MA = 80+10 Nm
LKS 20	-	MA = 100+20 Nm
LKS 29	-	MA = 100+20 Nm
LKS 30	-	MA = 100 Nm
LKS 20-EN	-	MA = 100+20 Nm
LKS21-EN	SC150	MA = 100+10 Nm
LKS31	SC250M	MA = 100+10 Nm
LKS 35-EN	SC350 SC357	MA = 120+10 Nm
LKS55-EN	SC550 SC557	MA = 130 +10 Nm
LKS 35 C	-	MA = 120+10 Nm
LKS 35 B	-	MA = 100 Nm
LKS 35 (36)	-	MA = 100 Nm
LKE 50	-	MA = 100+10 Nm
LKE51	-	MA = 100+10 Nm
LKE55	-	MA = 110+10 Nm
LKE 70	-	MA = 120+10 Nm

*** Securing screw M6 x 6 (for centre bolt) torque setting MA = 6 Nm

Maintenance for rescue rams

Introduction

The daily care and maintenance of Rams is the same irrespective of the model. A selection of the current range of Rams available is pictured below:

Model	
LZR 12 Series & R410, R412, R414 Single stage <ul style="list-style-type: none">• Lifting Force up to 137 kN• LZR 12/300EN – 300mm Stroke• LZR 12/500EN – 500mm Stroke• LZR 12/700EN – 700mm Stroke• R410 – 300mm Stroke (13T)• R412 – 500mm Stroke (13T)• R414 – 700mm Stroke (13T)	
LTR3,5/820 & R430 3-stage telescopic ram <ul style="list-style-type: none">• Extended length: 1305 mm• Retracted length: 480 mm• Unique 3-stage telescopic ram• Pushing force up to 267 kN• Weight 17.5 kg	
LTR12/575EN & R420, R422, R424 2-stage telescopic ram <ul style="list-style-type: none">• Extended length: 1505 mm• Retracted length: 480 mm• Pushing force up to 267 kN• 24 tons lifting capacity• Weight up to 20.9 kg	

Visual & User check after each use

A visual & user check should be carried out after each use of the ram. The ram claws, body and hoses should be checked for the following

Claws on cylinder bottom and piston

- Visible external damage
- Gripping edges clean and sharp?
- Piston clean with no score mark or dents

Rescue ram body

- oil leakage on cylinder body or control valve
- protection cover for lever arms in good condition
- control valve returns to centre position smoothly when released (dead man function)
- pipe handle in good condition and properly tightened

Hydraulic hoses

- condition of the end fittings
- leakage on the connection to the valve block
- visible surface defects such as cracks, kinks, abrasions or bubbles
- condition and smooth operation of quick couplers
- presence and condition of dust caps
- Hoses not older than 10 years? The date of manufacture (quarter / year) is printed on the hose surface.

Stowage

- the tool should be stowed with the ram slightly extended (not under pressure)



Function and Load Test

It is recommended that a full function and load test is carried out on an annual basis. This test should be carried out by LUKAS trained persons only. For a full service of Lukas rescue equipment contact PT Hydraulics.

Maintenance for Hoses & Hose Reels

Introduction

The daily care and maintenance of hoses and hose reels is the same irrespective of the model. A selection of the current range of Reels available is pictured below:

Model	
DSH20 & DHR20 Dual hose reel <ul style="list-style-type: none">• Mechanical brake for both hose pairs• Hose length: 2 x 20 m• Weight: 42 kg (DSH20) & 34kg (DHR20)	
ESH15, SHR15 & SHR20 Single Hose Reel <ul style="list-style-type: none">• Hose length: up to 20 m• Weight: 23 kg (ESH15) & 16.8 kg (SHR20)	

Visual & User check after each use

A visual & user check should be carried out after each use of the Hose reel paying particular attention to the state of the hoses.

Check the body of the hose reel for the following:


- Brake system, if fitted working correctly
- No oil leaks are present on the hub of the hose reel
- No oil leaks present at the hose ends or around the couplings
- Reels turn easily
- Check condition of the hose
- Carry handles firmly affixed

Age of hose

- Hoses not older than 10 years? The date of manufacture (quarter / year) is printed on the hose surface.



Month/Year

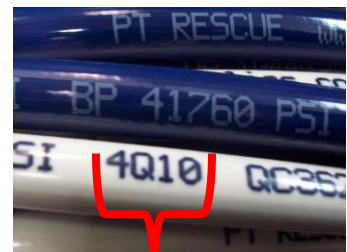

Qtr/Year

Examples of possible defects of hose

- Marks, cuts or splits on the surface of the hose
- Outer layer brittle and cracking
- Kinks and bends that are not normally part of the hose system
- Leaks at any point in the hose
- Hose end fittings damaged, parting or leaking



Brittle outer layer



Major kink & exposure of wire braid



Slit in outer layer of hose



Heat damage from exhaust



Major kink



Brittle outer layer of hose

Damaged or leaking hoses are hazardous and can cause serious injury to the user of the equipment. There is also a possibility of combustion of the fluid if subject to a heating source if the fluid within escapes under pressure. Any hose that is damaged should be withdrawn from service and replaced.

The manufacturer of the hoses states that Irrespective of condition all hoses must be replaced 10 years from the date of manufacture.


Safety Instruction

Rescue Hose must never be exposed to the following aggressive fluids as the outer layers of the hose could be damaged:

- Brake and Automatic Transmission Fluid
- Acid or Solvent
- Alcohol or Fuel
- Phosphate Ester

If the hose is subject to any of the above it should be cleaned immediately with water and detergent.

Taking Care of Hoses

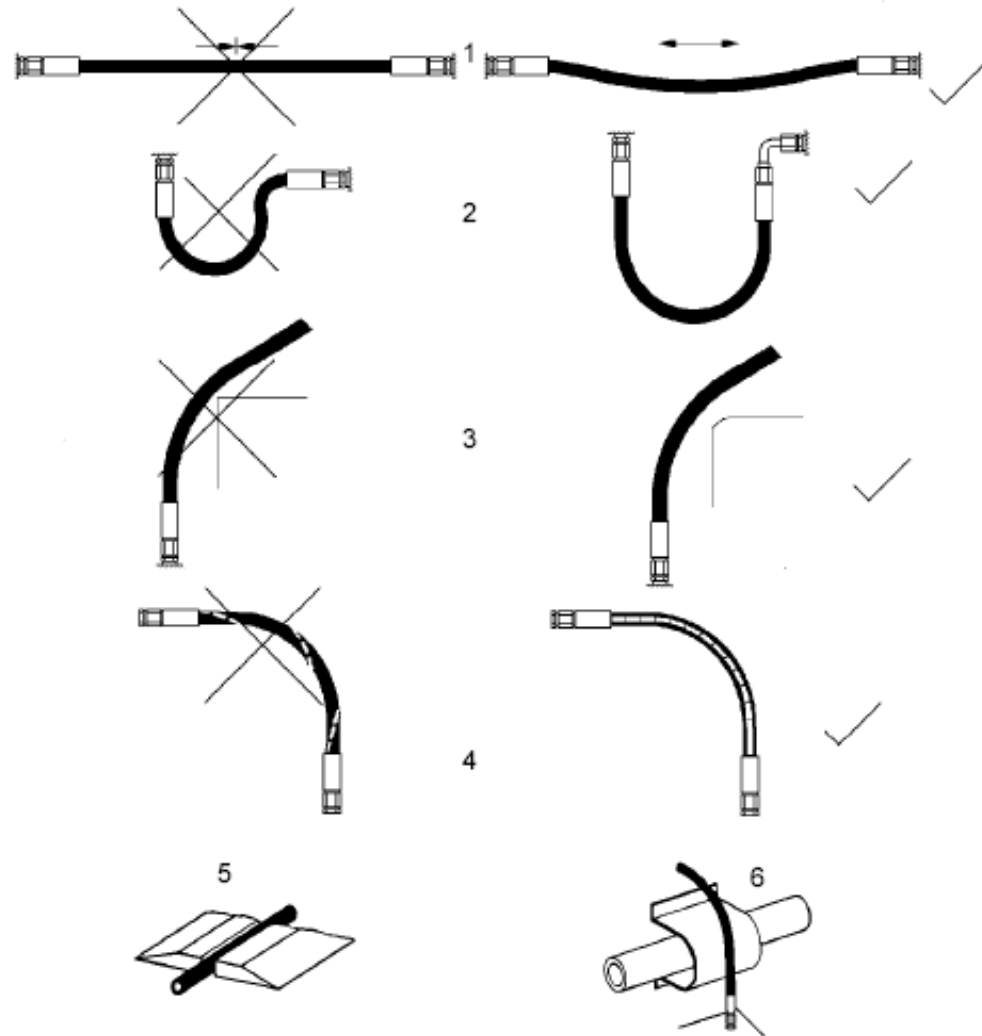

In order to ensure the safe use of hoses and to keep them in good working condition the following should be adhered to:

- Never exceed the maximum working pressure of the hose.
- Do not over tension the hose (See Fig 1).
- Never exceed the minimum bend radius (See fig 2).
- Do not allow the hose to make contact with sharp or rough edges (see Fig 3).
- Avoid excessive twisting of the hose (see fig 4).
- Protect your hose from vehicles, lay hose barrier as fig 5 or prevent vehicles from driving in the working area.
- Prevent your hose from coming into contact with hot areas such as mufflers or engine parts.

Streamline Couplings



The 'Streamline' coupling was developed with other leading hydraulic rescue tool manufacturers. This standardisation across various hydraulic rescue equipment suppliers offers enormous advantages for rescue agencies & organisations.

Characteristics of the Streamline coupling system are:

- Inspection of both the pressure and return lines is possible at any time;
- Burst pressure of both hoses exceed 3100 bar;
- Connects with or without pressure;
- No need for manual pressure release;
- Rotation of 360 Degrees;
- Quick and easy operation even when wearing gloves;
- Robust design reduces risk of malfunction due to debris invading the coupling;
- Up to 50 mtr hose lengths without appreciable loss of speed or force; and
- Retrofit to any existing twin hose system – no need to buy new models.

Cleaning of the Streamline Coupling

When rescue operation or training is completed cleaning of the streamline coupling requires couplings to be wiped down and dust caps cleared of debris and capped onto couplings. Hoses and couplings checked for any damage – stored as required in appliance.



Adjustable Ram Support LRS-C

The basic care and maintenance procedures and checks for the Lukas Adjustable Ram Support LRS-C are:

- Check for visible deformation;
- Check for material or weld seam tears;
- Check for jammed or damaged rig pin;
- Check for jammed movement of lower part in upper part of ram support LRS-C; and
- Check for serious corrosion.

Continued use of the ram support LRS-C is not permitted if any of the following types of damage are present:

- Abrasion caused by the bottom jaw of the rescue ram as well as impressions of up to approx 3mm depth;
- Minimal warps and deformation of materials in the area of the jaw tips; and
- Other minimal damage of the zinc surface protection. On completion of checking the ram support LRS-C keep the device protected from corrosion by lightly oiling it. The rig pin should be greased approximately every 3 months or when movement becomes restricted.

Repairs

Use only original Lukas spare parts. Servicing must only be carried out by manufacturer or their agent PT Hydraulics.

Hydraulic & Engine Oils

Hydraulic Oil recommendation

Mineral DIN ISO 6743-4 for Lukas hydraulic equipment


Oil temperature range	Oil code	Viscosity rating
-20 +55°C	HM10	VG10

PT Rescue stocks relevant hydraulic oil to the above specification and is available for purchase

Engine Oil recommendation

Oil is a major factor effecting performance and service life. Use 4-stroke automotive detergent oil.

Use 4-stroke motor oil that meets or exceeds the requirements for API service classification SJ or later (or equivalent). Always check the API service label on the oil container to be sure it includes the letters SJ or later (or equivalent)

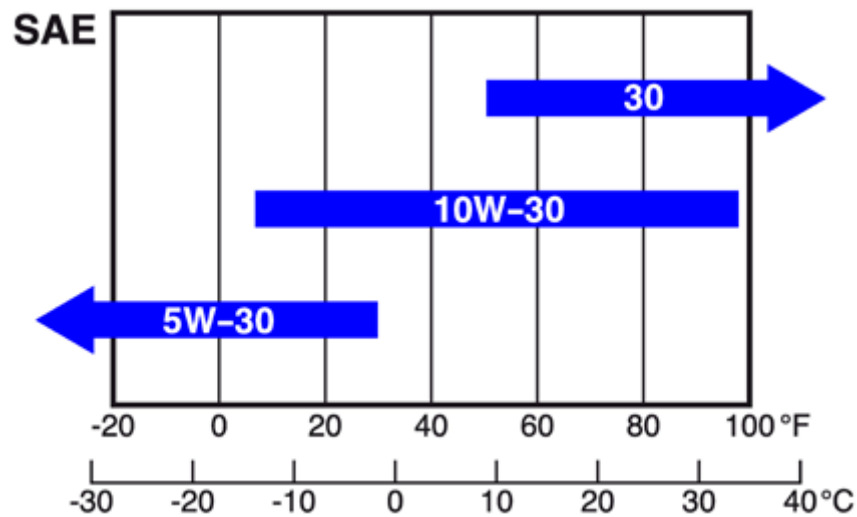

SAE-30W Heavy Duty 4-stroke engine oil is recommended for general use. Other viscosities shown in the chart may be used when the average temperature in your area is within the indicated range.

Frequently Asked Questions

1. LUKAS twin couplings seem to be leaking?

No, the small amount of hydraulic fluid that may be seen is normal. The LUKAS safety coupling prevents pressure increase inside the tool due to change of temperatures. (+ 1°C = 9bar pressure increase).

2. Is it allowed to cut hinges on vehicles?

Yes it is, however care should be taken during this operation.

3. Is it possible to disconnect and connect twin couplings under load?

Yes. Built-in check valves let the tool remain in position.

To Disconnect:

- Ensure the pump flow is OFF
- Release the pressure line first, then the return line (blue)

To Re-Connect:

- Ensure there is no pressure flow
- Connect the return line (blue) first, then pressure line

The tool can then be used as normal

4. Why is the maximum spreading force of LSP40 and LSP60 the same?

This was decided upon during the design stage.

The important factor about the spreaders is their spreading force within 25mm of the end of the tip.

The difference at this point is:

- LSP40EN: 43.2kN
- LSP60EN: 62.4kN

5. When and how often should the hydraulic oil be replaced?

There is no hard and fast rule for this. But if the oil is dirty it should be replaced as soon as possible. Most rescue agencies are having their pumps serviced annually and the oil is changed as part of this service.

6. What happens if the mono-coupling is disconnected while the equipment is running?

The mono-coupling permits fast and easy coupling while the equipment is in operation. For this reason it does not have a mechanical interlock. If the mono-coupling is disconnected while the equipment is running, it will immediately seal itself. No oil can leak out and the load maintenance function causes the attached rescue equipment to remain stationary at the point at which it was operating. To continue working with the rescue equipment, simply reconnect the two halves of the coupling.



19 Ricketts Road

Mount Waverley Victoria 3195

P: 03 9562 8800 F: 03 9562 8080

Email: rescue@pthydraulics.com.au

Website: pthydraulics.com.au

Notes